


Model	m3/h	0,0	LO	2,0	3,0	4,0	5,0	6,0	Peso imballo [kg]
	l/mn	0,0	16,7	33,3	50,0	66,6	83,3	100,0	
	Hz	H[m]							
4HS - 04/03	50	18	16	12					22
	60	26	24	19					
V in = 1X230V +/-15% 50/60 Hz PI max = 2.4 V in = 1X230V +/-15% 50/60 Hz PI max = 2.4 kW	70	34	33	28	21				
	80	45	43	38	31	20			
	90	58	55	50	42	32			
	100	70	68	64	56	46			
	110	85	83	78	70	60	47		
Rozmery balenia = 139 x 22 x 16 cm									



Pre dosiahnutie prevádzky na konštantnom tlaku stačí nainštalovať čerpadlo 4HS, pripojiť riadiaci modul a pripojiť snímač tlaku. Malá expanzná nádoba slúži na vyrovnanie strát v zariadení kým čerpadlo nebehí

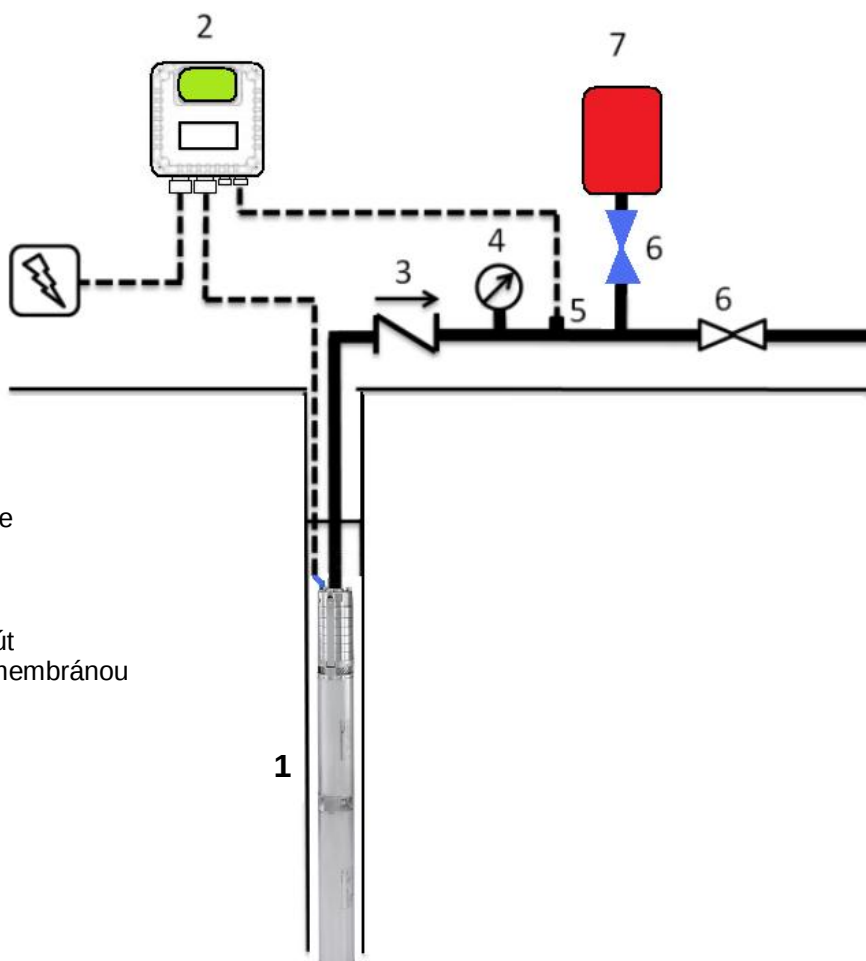

1. Čerpadlo 4HS
2. Control Module
3. Spätný ventil
4. Manometer
5. Snímač tlaku
6. Posúvač / kohút
7. TL. nádoba s membránou